Design and printing guidelines



File preparation

Tessellation

Before sending a job to a 3D printer, the model to be printed needs to be tessellated. That means that its geometry needs to be converted into triangles, which are used by the printer to create layers. It is very important to pay attention to this step: if not done correctly, it can cause problems such as inaccuracy or slow processing.

Standard formats in the additive manufacturing industry include 3MF (with more information about the model) and STL.

A normal file size for a model is about 1–30 MB, but the size depends on the type of software that created it, the number of triangles, the number and level of details, and so on.

When exporting to STL in a CAD package, you are often required to introduce some parameters such as angle tolerance and deviation chord height. These parameters define the resolution and file size of the part. The following tips may help you to export with the best surface to file size ratio.

Solid Designer settings

Save as STL, click **Options**, and check the ASCII option. The recommended values for the Distance and Angle box are 0.05 and 1.

re Modeli	ng Structu	re Feature	3D Geometry	Analysis	View	Applicat	ions Sheets	HomeBrew
Save To be saved	• •	-				۲ ×	Trim -	
Select All Objects							y20 V	. N
Seve in	suit plot		v	0 1	? 🔤 •			
Aurick access	Lattice.sti Pyramid.s	el						
Desktop								
Libraries							L	
							Stereolithogr	aphy
							(D) + 4 + 4	
This PC							@ AQCI	Olinary
This PC							Number of 5	OBinary
This PC	Filename				v	Save	Number of S	Ollinary
This PC	Filename File Type	STL (*.st)			~	Save Cancel	Number of S	O Binary Iolids
This PC	Filename: File Type File Version:	STL (*.#0				Save Cancel Options	Number of S 0 Max Deviate Distance	O Binary lottes
This PC	Filename File Type File Version	STL (*.#0)				Save Cancel Options	Mumber of S 0 Max Deviatio Distance Angle	0 Binary iotics m 0.01 1
J This PC	Filename: [File Type: [File Version:	STL (*.#)				Save Cancel Options	Number of 5 0 Max Deviatio Distance Angle Minimum Bo	O Binary Iolids an 0.01 1 sends (X,Y,Z)
This PC	Filename: [File Type: [File Version:	STL (*.ati)				Save Cancel Options	Max Deviation Distance Angle Minimum Be	O @inary iolids m [0.01 1 [1 1 conds [X,Y,Z] conds [X,Y,Z]

SolidWorks settings

- 1. Click File > Save As.
- 2. Select **STL (*.stl)** as the file type.
- 3. Click **Options**.
- 4. Choose the **Binary** option. Binary files are smaller than ASCII files for the same tessellation.
- 5. Choose **Custom** resolution.
- 6. Set the deviation tolerance to 0.05 mm.
- 7. Set the angle tolerance to 1°.

Save As		8		
ProgramData + SOLIDWORKS + SOLIDWORKS 2015 + templates	• 4 Search templa	ntes P		
Organize - New folder		H • 0		
Desktop Name Date modified Download Gacia Gras, Mar Google Drive Google Drive E	Type	Size		
Recent Places	Export Options			
↓ Ubranies Documents Music Plienane Site asyste Site (1:stit) Description: Add a description Options	THE FORMAL TIGE 5.33 STEP ACS Passolid VRML IFC STLVAME VDA TIF PSD/IPC/PNG EDRW/EPRT/EASM POF	Output a Binary Resolutio Coarse Curtor Presie Traing Do no Sare a Curtor	ASCI Unit: Millimeters Deviation Deviation Tolerance: 0.05 Angle Tolerance: 1 Tolerance: 1	
	Reset	Output co	ordinare system: default 💌	OK Cancel Help

Rhinoceros settings

- 1. Click File > Save As.
- 2. Select **STL (*.stl)** as the file type.
- 3. Click File Name > Save.
- 4. Select Binary.
- 5. Select **Detail Controls** from the Mesh Options.
- 6. Set the maximum angle to 1, the maximum aspect ratio to 6, and the minimum edge length to 0.05.

STL problems

• Too many or too few triangles

Too many triangles are difficult to process and, when a certain size is reached, the extra triangles do not provide any further accuracy. For this reason, an excess of triangles could increase processing time for no benefit.

Triangulation of a surface causes faceting of the 3D model. The parameters used to output an STL model affect how much faceting occurs.

Example of tessellation



• Holes in triangles

STL models commonly suffer from surfaces that are not joined to their neighbors, and missing surfaces.

Repairing STL files

STL-repairing software

- Magics Materialise
- Netfabb
- HP SmartStream 3D Build Manager

Common errors in STL files

• Triangles not joined







• Flipped-direction triangles





Minimum specification for parts

There are some specifications to bear in mind in order to avoid issues in parts, and to achieve the best quality.

The minimum printable features in planes X, Y, and Z are as follows:

Minimum hole diameter at 1 mm thickness	0.5 mm
Minimum shaft diameter at 10 mm height	0.5 mm
Minimum printable font size for embossed or debossed letters or numbers	6 pt
Minimum clearance at 1 mm thickness	0.5 mm
Minimum slit between walls	0.5 mm



• **Engraving.** Multi Jet Fusion technology allows you to print letters and drawings with a very high resolution and definition.

For the best possible output, any text, number, or drawing included in a part is recommended to have at least 1 mm of depth or height.

The best orientation for embossing letters is to place them upside down in the build chamber, while for debossing letters it is better to place them face up to achieve the best resolution.



- The **dimensional accuracy** that can be achieved by HP Jet Fusion 3D is ±0.2 mm up to 100 mm and 0.2% above that value, measured after sand blasting.
- Solid part or structural fill. Multi Jet Fusion allows you to print topology-optimized, generative designs or even small lattice structures. This kind of design helps to reduce the weight of the part and the quantity of material used, which not only reduces the cost of the part but also helps to reduce the operating cost in applications that are very weight-sensitive.

The minimum gap recommended in a lattice structure to ensure that all the material inside the part can be removed is 1 mm.



• When printing a **cantilever**, the minimum wall thickness depends on the aspect ratio, which is the length divided by the width.



Aspect ratio = Length/Width

For a cantilever with a width less than 1 mm, the aspect ratio should be less than 1. There are no specific recommendations for widths greater than 1 mm.

• In general, the minimum recommended **wall thickness** is 0.3 mm for short walls oriented in the XY plane, and 0.4 mm for short walls oriented in the Z plane.



For parts with a high aspect ratio, you are recommended to increase the wall thickness, or add ribs or fillets to reinforce the part.

TIP: Hollow out the part as much as possible, saving agent and powder, and reducing sink marks.

Very thick wallls can accumulate heat and cause spot shrinkage in dense areas with an accumulation of material.

• Minimum gap between parts to be assembled after printing. Sometimes a pair of printed parts need to fit together for the final application. In these cases, you are recommended to have gaps of at least 0.4 mm (±0.2 mm of tolerance of each part) between the interface areas that should fit together, in order to ensure correct assembly.





• Minimum spacing and clearance between parts printed as assemblies. Assembly parts that are printed together should have a minimum clearance of 0.7 mm. Parts with very thick



walls above 50 mm should have a higher gap in order to ensure proper performance.

- Hollow closed geometries. Multi Jet Fusion is a process in which the parts are built by selectively fusing the desired areas of a material-based layer. If the parts printed are hollow, drain holes need to be added to the design to remove the material. The minimum recommended diameter of the holes is 2 mm. You are recommended to include at least two holes.
- Glue lines. Parts larger than the maximum build size can be printed with Multi Jet Fusion by splitting them into different parts. They can then be joined together by glueing, welding, or by pin inserts.

If you plan to glue parts together, you are recommended to include interlocking features such as those shown in the pictures below: as a guide to position the parts, to help them to bond together, and to facilitate the glueing process. Remember to leave an additional space of 0.1–0.2 mm between parts for the glue, in addition to the minimum spacing between parts printed as assemblies (see above).

• **Ducts.** To remove material from narrow ducts, consider designing and printing a strip or a chain through the duct. When the parts have been printed, you can pull out the chain to dislodge most of the material. Any remaining material can be removed by the normal cleaning process.

